

## **EPROM READ/WRITE ERROR**

The program loads the EPROM and then verifies the program written is the same as the program read back.

### **Error File**

Gives the number of good and bad comparisons in the readback file.

```
EPROM  
Good 70423 Bad 50249 ← example of bad readback
```

### **Scope Debugging**

- 1) Check JTAG is working (see "JTAG TEST", test1.pdf).
- 2) If JTAG is working and the readback is still invalid see S. Durkin