- 1. Power on the Liquefier
- 2. Power on both compressors
- 3. On the laptop, Open "DSL Launch 5"
- 4. In the left hand tree, under "comm links"; Right click the dead compressor.
  - a. NUMBER 1 = Compressor #1 nearest the B125 door.
  - b. NUMBER 2 = Compressor #2 nearest the loading dock door.
- 5. Choose "run"
- 6. "DirectSoft 5 Programming" will open up.
- 7. In the second row of menu icons, click "Mode"
- 8. Tick the box for "Run" for New PLC Mode.
- 9. Click OK
- 10. Exit both DirectSoft 5 Programming and DSLaunch 5.
- 11. Check the front panel of the fixed compressor.
- 12. The top row of lights should be lit now.
- 13. If not, Call Linde
- 14. IF OK, proceed with the normal Start up.
- 15. If not starting.
- 16. Power off the compressors first.
- 17. Power off the liquefier.